

QUICK START GUIDE

BRIGHTBOARD-H19 DIGITAL SIGNAGE SYSTEM

Product #: FZHM07781



BEFORE YOU BEGIN

Be sure all of the following items were included in the box:

- Product Manual
- Assembly Hardware
- Digital Signage Player
- USB Card Reader
- Flash Memory Card (Pre-installed)
- AC Power Cable



1- Hanging The Brightboard Display*

*Note: Included hardware is for hanging display from a suspended ceiling.



Lay the Display face up.



Remove both chains.



Loosen bolt on each chain.



Slide chain onto bracket.



Tighten the bolt.



Repeat on other side.



Install 1st clip.



Install 2nd clip.



Notice clip orientation.



Slide clips together.



Clip properly installed.



Repeat on other side.**



Loosen bolt on each chain.



Lift unit onto 1 ceiling clip.



Tighten the bolt.



Repeat on other side.***



Plug AC cord into display.



Plug AC cord into 110VAC outlet.

**Note: Place clips a minimum of 11 3/4" apart.

***Note: Make sure that you hold the display while installing the chains to the ceiling.

Note: You may adjust the angle the display is hung by moving the chain location on the display brackets

Congratulations! Your new Brightboard Digital Signage System will automatically turn on and begin displaying the preloaded content.