

# QUICK START GUIDE

## BRIGHTBOARD-H27 DIGITAL SIGNAGE SYSTEM

Product #: FZHM07784

by:  DOOR SIX INC.

### BEFORE YOU BEGIN

Be sure all of the following items were included in the box:

- Product Manual
- Assembly Hardware
- Digital Signage Player
- USB Card Reader
- Flash Memory Card
- AC Power Cable



## 1- Hanging The Brightboard Display\*

\*Note: Included hardware does not include mounts for ceiling. You must purchase mounts of your choice that can hold at least 50 pounds..



Unpack the display.



Remove both chains.



Loosen bolt on each chain.



Place Display onto face.



Install bolt and tighten. \*\*\*\*



Repeat on other side.

\*\*\*Note: Make sure that you hold the display while installing the chains to the ceiling.

\*\*\*\*Note: You may adjust the angle the display is hung by moving the chain location on the display brackets

\*\*Note: Install ceiling mounts (sold separately) a minimum of 11 3/8" apart.



Loosen bolt on each chain.



Lift unit onto ceiling mount. \*\*\*



Tighten the bolt.



Repeat on other side.



Plug AC cord into display.



Plug AC cord into 110VAC outlet.

*Congratulations! Your new Brightboard Digital Signage System will automatically turn on and begin displaying the preloaded content.*

Refer to the included "Product Manual" for advanced setup and use.