

# 2-Sided Slatwall Tower

Product No. D019881 & D019881NH

ASSEMBLY INSTRUCTIONS

## Step: 1


We highly recommend performing the assembly with two persons.

Lay the slatwall panel down horizontally (prop up on shipping box).

Align the three holes on the base with the corresponding holes in the slatwall panel. Insert the hex screws through the washers and into the holes on the base.

Mount base to the slatwall panel with included Hex Key, turning the bolts clockwise.

Tighten until snug (do not over tighten).

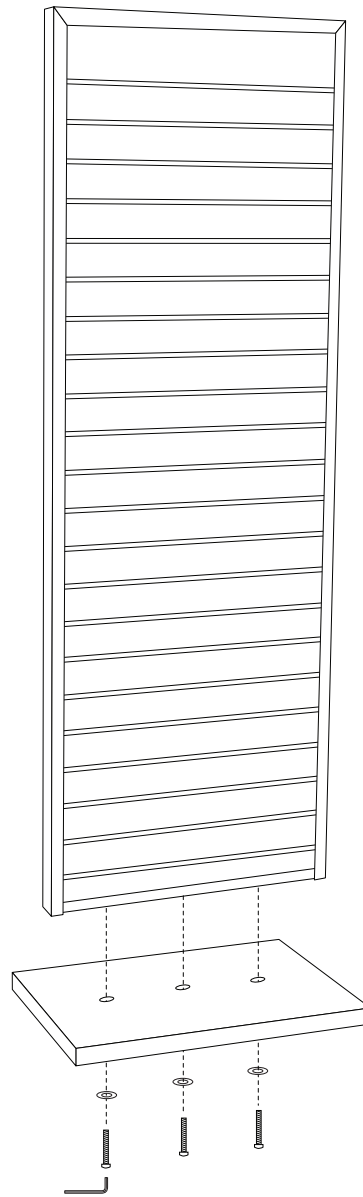

## Included Hardware

*Prior to assembly, be sure the included hardware is present. If you are missing any hardware, please call immediately.*

