


1-Sided Black Aluminum Floor Brochure Rack

Product No. L06971A

ASSEMBLY & INSTALLATION INSTRUCTIONS

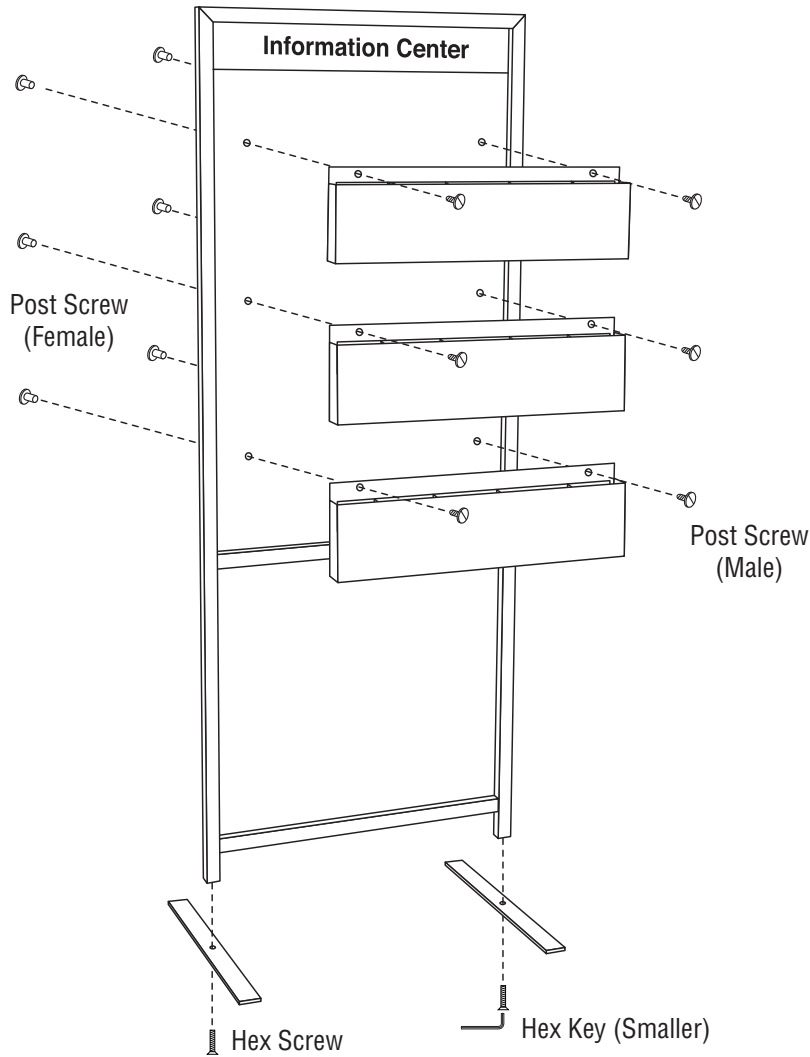

Mount the Base Sliders to the Frame:

1. Align the holes in the base sliders with the holes with the frame legs.
2. Insert the included hex screws & tighten using the smaller of the two hex keys. Tighten until snug. *DO NOT* over tighten. *The larger hex key fits the screws in the frame.*

Mount Literature Holders to Frame:

3. Align holes in each literature with the matching holes in the smoke acrylic backer.
4. Insert the post screws and tighten. Tighten until snug. *DO NOT* over tighten.

Parts & Hardware: *Prior to assembly, please be sure all of the parts and hardware are present. If you are missing any hardware, please call immediately.*

